


Assembly of the Encaustic Fume Extractor



Remove top nut and washer from 6" bolt. Slip through hole in corner of motor plate base. From the top, thread washer then bolt and tighten BOTH nuts to secure. Do this on all four (4) corners. After legs are attached you can adjust the nuts up or down to level the motor and to reach the top of your pallet.

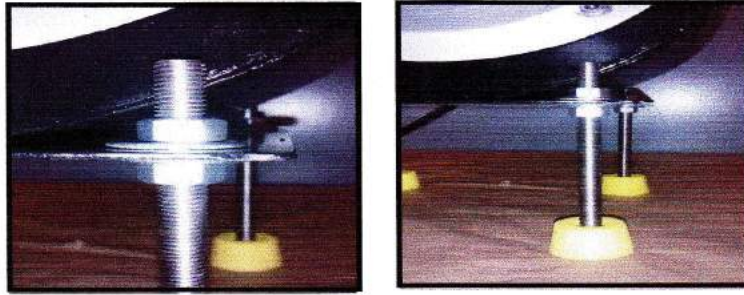

Remove nuts from the intake side of the motor. Slip on the rubber gasket then the hood onto the studs protruding from the motor. Re-attach the nuts and tighten to approximately 25 ft lb



Attach flex hose to out-take end of motor and secure tightly with hose clamp.



Attach flex hose to the tailpipe and secure tightly with hose clamp. Slide tailpipe through your 6" exit hole in your window or wall and attach the louvered cap to the outside of the building.

Connect 6' extension cord and plug into a 3 prong, 110 v outlet. Turn on unit with switch on the motor.



MODEL # ENC2015
HP: 1/8
RPM: 1600
Ph/Hz/V: 1/60/115
CFM: 500

Vent-A-Fume

a division of Vent-A-Kiln corp.
51 Botsford Place.
Buffalo, NY 14216
(716) 876-2023
info@ventakiln.com